

Email: info@ismoka.com
Web: www.eleafworld.com



MADE IN CHINA
Manufactured by iSmoka



IPIPE II
User Manual



Product instruction



iPipe II Kit comes with:

- 1×iPipe II
- 1×iPipe II atomizer
- 2×BCC atomizer head
- 2×18350 battery
- 1×charger
- 1×user manual



BCC atomizer head

power supply

charger

Based on traditional pipe's functions and features, iPipe II also brings new innovation for vapor. You not only can enjoy noble fashion lifestyle, but also can avoid being influenced by health hazards of the traditional tobacco and potential impact of second-hand smoke. iPipe II, with luxury design and superb technology, can be called the art of modern electronic cigarettes.



- No environmental pollution and can be used in public.
- No flame, no fire hazard.
- No tar that harms to health, no dangers of secondhand smoke.
- Heavy vapor available for terrific enjoyment which is 3-4 times the amount of similar products.
- Creative design for net - shaped LED light shade inspired by stereo shows the exalted tang.
- Ingenious structure prevents the e-liquid from leaking into the Bubinga body which better care for your device.

Product structure



Product structure



- The front end of iPipe II adds LED Light for work state.
- The dedicated battery is removable and chargeable 3.7V 700mAh 18350 lithium battery. Please do not use charger or battery of other kinds.
- Removable atomizer for convenient usage.
- Changeable atomizer head, BCC atomizer head.
- Atomizer head integrated with atomizer.

Introduction of usage



- How to assemble

Step1: unscrew the battery cap

Step2: insert the fully charged battery into iPipe II body

Step3: screw the battery cap back onto iPipe II body

Step4: take the mouthpiece out

Step5: Insert the atomizer with e-liquid

Step6: Insert the mouthpiece



Step1



Step2



Step3



Step4



Step5



Step6

Introduction of usage



- How to refill e-liquid

Step1: take the mouthpiece out

Step2: screw the front cap of iPipe II atomizer


Step3: refill e-liquid into the atomizer tube

Step4: cover the atomizer tube with the front cap

Step5: insert the mouthpiece



Step1

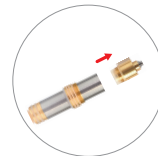

Step2



Step3



Step4



Step5


- How to replace atomizer head

Step1: unscrew the base

Step2: pull out the atomizer base and then pull out the atomizer head from the base

Step3: replace the old atomizer head with the new one

Step4: screw the base back onto the atomizer

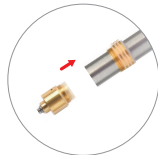


Step1



Step2



Step3

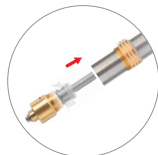

Step4

- How to replace atomizer

Step1: take the mouthpiece out

Step2: unscrew the atomizer that needs to be replaced

Step3: screw the new atomizer into pipe II body

Step4: insert the mouthpiece



Step1



Step2



Step3



Step4

Introduction of usage



- How to replace power supply

When the power is used completely, unscrew the upper cover, take the battery out and then install the fully charged battery, and twist the upper cover into pipe body.



Step1



Step2



Step3

Introduction of usage



- How to charge battery

Put the lithium battery without power into the charger. Please notice the place of the positive and negative electrode before putting it into the charger. The light will turn green from red after charging 3 or 4 hours which shows the charging has fully finished.



Step1



Step2

- Battery setting indication: the red LED light flashes 3 times.
- Work indication: the red LED light is from up to down.
- Constant voltage output: 3.3V.
- Short circuit protection: If short circuit happens to output end. LED will flash 3 times, which means that the device has no voltage output.
- Atomizer protection: If vapor for more than 10 seconds, the voltage will be cut down automatically, meanwhile, the LED will flash 10 times.
- Low voltage protection: when the voltage is lower than 3.3V, the red LED will flash 10 times. Then it will enter low voltage protection mode and stop vaping.
- Battery inversion protection. When the battery is set inversely, iPipe II will not work in order to protect the circuit from damage.

DOs

- Please store iPipe II and its accessories away from children while not used.
- Please take the battery out when you do not vapor for several days or longer.
- Please keep iPipe II individually from collision especially when you carry it.
- Please only use the dedicated battery and charger approved by the manufacturer.
- Please completely drain the battery before recharging.
- Please purchase a new battery when its using time gradually decreases after fully charging.
- Please dispose the battery according to your local regulation properly.

DON'Ts

- Do not charge the battery in damp environment.
- Do not set the battery inversely.
- Do not connect the positive or negative electrode directly with metal products, such as keys or other conductors which will bring short circuit or critically damage the battery.
- Do not attempt to take the battery apart-it is a sealed unit with no serviceable parts.
(otherwise no warranty will be provided)
- Do not fill the cartridge with other liquids such as alcohol, etc, in order to prevent atomizer from damage.

Appropriate user

- People who have history of smoking but feel uncomfortable;
- People with smoking habit who work in smoke-free place.

Inappropriate user

- Minors under 18.
- Nonsmokers who are allergy to nicotine or other chemicals.
- Women who are in preparation of pregnancy, pregnant and nursing women.
- People who have cardiovascular disease, hypertensive patient, diabetes, etc. and please consult your doctor before using for more details.

Please consult with Ismoka distributors for their warranty and return policy. We are not responsible for the defects caused by human error. Ismoka's warranty does not apply to products purchased through third party vendors.